



**EXOGAL**

## SR71 Smart Remote

## User Guide



Volume Up  
Output  
Mute  
Volume Down  
Input

### Using the SR71

The EXOGAL SR71 Smart Remote features a wireless RF protocol.

Button	Usage
VOLUME UP	Pressing the Volume UP button one time increases the volume ONE step Pressing and Holding the Volume UP button will rapidly increase the volume
VOLUME DOWN	Pressing the Volume DOWN button one time decreases the volume ONE step Pressing and Holding the Volume DOWN button will rapidly decrease the volume
MUTE	Cycles through the device's Mute Modes (See the appropriate Product User Guide for details)
INPUT	Cycles through the device's Input Modes (See the appropriate Product User Guide for details)
OUTPUT	Cycles through the device's Output Modes (See the appropriate Product User Guide for details)

**Note:** The SR-71 Smart Remote is a very low power device and is not intended to control an EXOGAL audio component over a large distance. Your best results will be achieved when the SR-71 is within approximately 9 feet (3 meters) of the EXOGAL audio component.



CR2032 Battery  
PLUS (+) Up

### Battery Replacement

The SR71 Smart Remote can be opened easily by carefully prying the edge of the two plastic cases apart (be careful not to cut or scratch the surface or edges).

Replacement Battery: CR2032 (coin battery), Lithium, 225ma nominal  
Replace with the PLUS (+) side of the battery facing up

**Note:** Installing the battery with incorrect polarity may damage the SR71!